



INSTRUCTION MANUAL

STREAMVAC™

Codes:

DVB-KIT-1-032

Kit Includes:

- 1x STREAMVAC Internal Cleaning Vacuum (Battery)
- 2x 6ft 32mm Carbon Fibre Modular Pole
- 1x 6ft 32mm Carbon Fibre Modular Pole
- 1x Round Dusting Brush 50mm
- 1x Curved Dusting Brush 100mm
- 1x Sidewinder Vacuum Tool 200mm
- 1x Traditional Floor Tool Kit



English

INSTR-DVB-KIT-1-032

Thank you for purchasing a STREAMLINE® Internal Vacuuming System

The **STREAMVAC™** is designed to vacuum dust from high, as well as, normally, inaccessible locations, such as stairwells, whilst keeping both feet on the ground. The sectional pole is connected together to access a reach of up to 30 feet. Various nozzle attachments are available for different surfaces and applications. The **STREAMVAC™** has a running time of approximately 30 minutes after which the battery will require charging.

Safety Precautions

Ensure you read the instruction manual before using the machine.

- Operators shall be adequately instructed on the use of these machines, as with all electrical equipment, care and attention must be exercised at all times during use, you must also make certain that routine and preventative maintenance is carried out periodically to ensure safe operation.
- Failure to carry out maintenance as necessary, including the replacement of parts to the correct standard could render this equipment unsafe and the manufacturer can accept no responsibility in this respect.
- This machine is for DRY USE only.
- You must remove the battery BEFORE cleaning or maintenance and when replacing parts or converting to another function.
- This appliance is intended to be assembled, cleaned and maintained by an adult.
- This machine is not suitable for the collection of biological hazards, hazardous or explosive dusts.
- This machine is not a toy, children shall not play with this machine.
- This machine must not be used by persons with reduced physical, sensory or motor capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction.
- If the vacuum cleaner stops working, remove the battery before investigating where the fault lies.
- If the vacuum cleaner has a blockage, switch off, remove the battery from the appliance, and inspect the poles and hose for debris. If the poles and the hose are clear, replace the dust bag and clean the filter.
- This machine is equipped with a thermal cut-out to protect the motor and other vital machine parts from overheating. Should the machine cut out it will automatically reset when cooled.
- The vacuum system should be inspected before use for any damage.
- Always replace any worn/damaged parts immediately.
- This machine must NOT be stored outside, or used in wet environments, or to collect wet materials.
- The vacuum cleaner should be stored in a dry place and is for indoor use only.

If you have any questions regarding the safe operation of your **STREAMVAC™**, please contact our Technical Support Team on
+44 (0)1626 830830

STREAMLINE® disclaims all liability for damage or injury as a result of improper or unreasonable use or failure to follow operating instructions of

Instructions for use

Charging the battery

Before using the Streamvac, ensure that the battery has been fully charged. Insert the battery into the charging receptacle and connect the charger to a mains power supply. Charge the battery for a maximum time of 3 ½ hours. Remove the battery from the charger and insert it into the Streamline backpack, securing it in position with the locking lever.

Setting up

NB - Make sure that you are displaying sufficient warning signs if you are working in public places.

- Connect the flexible vacuum hose to the inlet on the top of the Streamvac. Lift the **STREAMVAC™** onto your back and adjust the straps until they fit comfortably.
- Join the required number of carbon fibre pole sections together, with the narrow tapered end pointing in the direction of the air flow. Connect the flexible hose to the narrow taper end of the pole sections. Select the required attachment and join it to the larger taper end of the pole using the plastic taper connector.
- Switch the **STREAMVAC™** on by pressing the green switch on the pendant wire, and commence with the task on hand.

NB - Care should be taken to avoid contact with any electrical sources. Electrocution can occur.

Check the battery charge on the indicator situated at the end of the pendant wire.

Maintenance

- When the dust bag becomes full, remove the **STREAMVAC™** head assembly by lifting the two tabs on either side and replace the bag.
- Dust the filter basket periodically and replace it if it gets damaged or becomes unserviceable.

Pole Sections

- Keep the taper joints of the sectional pole clean and free from grit.

STREAMLINE® Warranty

The warranty on all Machines and Equipment is for 1 year (12-months) from RECORDED DATE OF PURCHASE.

THIS WARRANTY EXCLUDES NORMAL MAINTENANCE ITEMS, including but not limited to HOSES, FILTERS, O-RINGS, DIAPHRAGMS, VALVES, GASKETS, CARBON BRUSHES and damage to motors and other components as a result of failure to replace normal maintenance items. THIS LIST IS NOT EXHAUSTIVE.

If **STREAMLINE®** receives notice of such defects during the warranty period, **STREAMLINE®** will either, at its opinion, repair or replace components which prove to be defective.

Replacement parts will only be supplied under warranty, upon the inspection and approval of the defective parts by **STREAMLINE®**.

Should it be necessary to supply replacement parts before the opportunity to inspect, these will be charged at current prices and credit will only be issued upon subsequent inspection and warranty approval by **STREAMLINE®**.

The customer is responsible for the cost of return of the defective part. If warranty is approved, **STREAMLINE®** will pay for the cost of the repaired or replacement part.

This warranty excludes the following conditions and circumstances which are at the discretion of **STREAMLINE®**:

Wear and tear, misuse, abuse improper maintenance, frost damage, the use of chemicals other than those supplied or approved by **STREAMLINE®**, improper installation or repair, unauthorised modification, incidental or consequential costs, loss or damage, service, labour or third party charges, the cost of returning defective parts to **STREAMLINE®**.

This warranty constitutes the exclusive remedy of any purchaser of a **STREAMLINE®** unit and is in lieu of all other warranties, express or implied, including without limitation any implied warranty of merchantability or fitness for use, to the fullest extent permitted by law. In no event shall any implied warranty of merchantability or fitness for use exceed the term of the applicable warranty stated above and **STREAMLINE®** shall have no other obligation or liability.

Important

Unfortunately these rights cannot be transferred to a third party.



Why STREAMLINE®?

Flexibility

- **STREAMLINE®** systems can be built according to customers' exact requirements
- For non-standard systems, the user's needs or specifications are listened to and turned into reality.

Quality

- Whilst price is important, quality is remembered long after price is forgotten
- We insist on sourcing brand name products from around the world, only of a reputable quality, and bring them together under the **STREAMLINE®** name
- All **STREAMLINE®** products carry a full one year's warranty, according to the manufacturers' standard terms and conditions of sale.

Service

- We have an in-house technical helpline able to answer most of your questions relating to the capabilities and functionalities of all **STREAMLINE®** products
- If we get it wrong, we will put it right. If you are sent a wrong item, we will immediately attend to sending you the correct item and arrange a collection of the wrong item without any quibbles
- **STREAMLINE®** is backed by a comprehensive range with massive stocks providing you with a 'one stop shop' for all your requirements.



MANUFACTURED
IN THE
UNITED KINGDOM

STREAMLINE®
SAFELY CLEANING AT HEIGHT

CHECKED AND
TESTED BY
QUALITY CONTROL

Notes

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....



Hamilton House, 8 Fairfax Road,
Heathfield Industrial Estate,
Newton Abbot
Devon, TQ12 6UD
United Kingdom

Telephone: +44 (0) 1626 830 830

Email: sales@streamline.systems

Visit www.streamline.systems