

STREAMLINE | INSTRUCTION MANUAL





1.	Responsibilities	
	General Responsibilities	3
	Manufacture Responsibilities	
	Personnel Responsibilities	3
2.	Technical Specifications	
	Specification data	4
3.	Smartank™ 2 Diagram	
4.	Safety Regulations	
	Electrical Specifications & Safety	
	Safety Precautions	
	Personal Safety System Safety	
_		ο
5.	Setting Up The Smartank™ 2	
	Unpacking The Smartank [™] System	
	Filling Time & Filtration Process Split Charge Relay.	
	Charging The Smartank™	
	Filling the Smartank™ 2	
	Getting ready to clean	
	Turning The Smartank™ 2 Off	
	Pressure washing take off Tips when cleaning	
6.	Storing The Smartank™ 2	17
7.	Malfunctions & Troubleshooting	
	Controller Messages	
	Troubleshooting	
	Adjusting Calibration	
8.	Maintenance & Replacing Filters	
	Inspections	
	Pump	
	TDS Metres.	
	Prefilters Reverse Osmosis	
	De-Ionising (DI)	
9.	Disposing Of Filters & Machine	25
10.	Why Streamline™?	
11.	Warranty Information	
		21

1



Responsibilities

General Responsibilities

These operating instructions allows you to use the Smartank[™] 2 tank system safely and efficiently. The instructional booklet must be read before setting up, starting or using your Streamline[™] equipment. It is an integral part of the product itself.



Please read the warning and instructions contained in this booklet carefully. They provide important information on the safe use and maintenance of the equipment. Pay particular attention to general safety instructions.

Please keep this booklet in a safe place near your Smartank™ 2 tank system for future consultation

Your Smartank™ tank system is constructed according to current safety standard and regulations. The latest and current edition is illustrated in this manual.

The contents of this booklet should be bought to the attention of all users.

.....

Manufacturers Responsibilities

Varitech Systems Ltd, the manufacturer of Streamline[™], holds 12-months warranty on all machines and equipment from the date of purchased (see Warranty section 2)

Varitech Systems Ltd, the manufacturer of Streamline[™], is in no case responsible for failures or errors caused by modifications to the unit by customer or other persons.

Personnel Responsibilities

The Smartank[™] 2 tank system is designed and manufactured to be operated in industrial applications. It is important that the operator(s) of the Smartank[™] 2 tank system have read through these operating instructions thoroughly, and understand all safety instructions and regulations.

The Smartank[™] 2 tank system is not intended for use by children, adolescents, persons under the influence of alcohol / drugs or simply lacking experience and knowledge. These operating instructions are designed to educate the user, informing t he operator how to carry out the task at hand successfully, whilst avoiding potential dangers that might occur.

Important


If needed, training videos can be found on the Streamline™ website: www.streamline.systems



Technical Specifications

Specification Data

	Smartank™ 400 (RODI)	Smartank™ 650 (RODI)
Country of Origin	United Kingdom	United Kingdom
Maximum Height	440mm	440mm
Maximum Length	1671mm	2090mm
Maximum Width	1215mm	1215mm
Dry Weight	150kg	172kg
Wet Weight	556kg	757kg
Min. Inlet Pressure Requirement	2.8 / 40 bar / psi	2.8 / 40 bar / psi
Optimum Operating Pressure	6.9 / 100 bar / psi	6.9 / 100 bar / psi
Standard Water Inlet Connection (Male hose lock)	³ /4 inch	³ /4 inch
Waste Water Outlet Connection (Male hose lock)	³ /4 inch	³ /4 inch
Pure Water Outlet Connection (Male hose lock)	³ /4 inch	³ /4 inch
Electrical Power Supply	12v Battery / 230V mains	12v Battery / 230V mains
Optimum Water Quality	000ppm	000ppm
Water Quality Range	000ppm - 1000ppm	000ppm - 1000ppm
Pure Water Flow (under optimal conditions)	4.5 Lpm Per Pump	4.5 Lpm Per Pump
Battery Operating Time	Approx. 10hrs	Approx. 10hrs

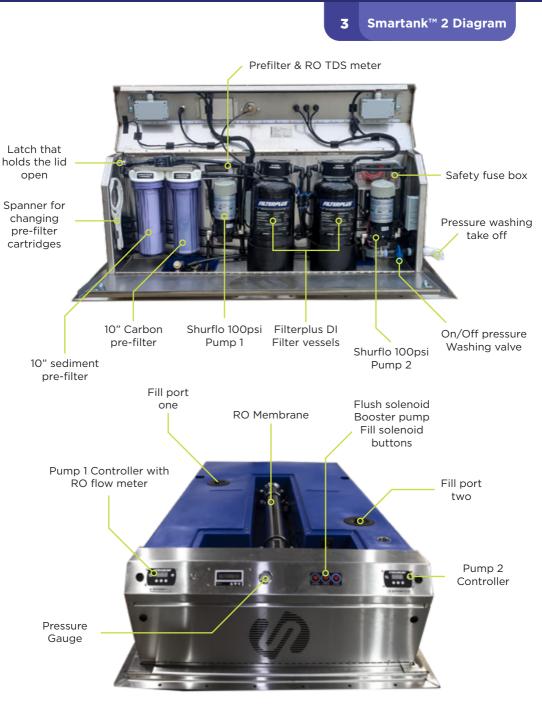



4 Safety Regulations

Safety Regulations

Electrical Specifications and Safety



This applies to all Smartank[™] 2 system configurations Electrical connections must be carried out in respect of current legislation (in compliance with the provisions of the IEC 60364-1 standard) and in accordance with the manufacturer's instructions. Please check that the installation and sockets are adequate for the maximum power of the appliance indicated on the rating plate. If in doubt, consult a qualified electrician. The correct plug should be fitted by a qualified electrician.

- Varitech Systems Ltd, the manufacturer of Streamline[™] declines all liability for damage to persons, animals or things caused by faulty or incorrect connection.
- Before connecting the equipment, check that the specification given on the rating plate corresponds to that of the mains electrical supply.
- If the equipment is connected via an extension, use cables with an adequate cross section, never less than 1,5 mmq. The plug and socket must be watertight.
- The electrical safety of the equipment is guaranteed only when correctly and efficiently Earthed as specified in current electrical safety legislation (in compliance with the provisions of the IEC 60364-1 standard). This fundamental safety requisite should be verified. If in doubt, ask a professionally qualified electrician to check the system thoroughly. It is recommended that the electric supply to this machine should include a Residual current device that will interrupt the supply if the leakage current to earth exceeds 30 mA for 30ms or a device that will prove the earth circuit.

Varitech Systems Ltd, the manufacturer of Streamline™, declines all liability for damage caused by faulty earthing of the appliance.


- The equipment can be disconnected from the mains only by unplugging the plug from the mains socket.
- When using any electrical appliance, certain fundamental rules should be respected:
 - Do not touch the appliance with wet hands or feet;
 - Do not touch the appliance with bare feet or unsuitable clothing;
 - Do not pull the power cable or appliance itself to unplug the plug from the mains.

Safety Precautions

- It is always recommended to professionally install the SMARTANK[™] 2 by the Manufacturer or an approved installer. Speak to Varitech Systems Ltd for more details.
- If being installed in a vehicle or trailer, always ensure the vehicle/trailer has a suitable payload for the SMARTANK™ 2 to be installed.
- Do not use the SMARTANK[™] 2 with telescopic poles in the vicinity of power lines, junc tion boxes, power sockets – Please read Streamline[™] OVA8[®] operating instructions.
- Do not attempt to modify the SMARTANK[™] 2 as this could cause a safety hazard or system breakdown.
- Never use faulty components or if there is visible damage to the pole or fittings replace them immediately with original spare parts.
- Do not under any circumstances use the **SMARTANK[™] 2** on humans or animals.

Personal Safety

Stay alert, watch what you are doing and use common sense when operating the Smartank[™] 2 tank system. Do not use the filtration system while you are tired or under the influence of alcohol, drugs or medication. A moment of inattention while operating the filtration trolley may result in serious personal injury.

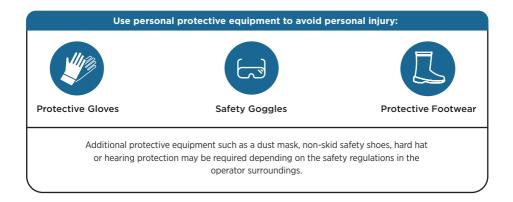

Additional protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing
protection may be required depending on the safety regulations in the operator surroundings.



System Safety

The Smartank $^{\rm M}$ 2 tank system is manufactured with the safety of the operator in mind, including some key features such as;



OVER PRESSURE

- If the water pressure in the Smartank™ filtration system rises above the maximum 100psi / 6bar pressure, the pressure switch valve shuts on the pump closing the system down, and not letting the pressure in the system rise any further.
- It is important to never open the filter vessels or membrane housings during Operation or whilst under pressure.



OVER HEATING

• If the powerful booster pump overheats on the Smartank[™] system, an activation switch is triggered and the system will automatically switch off.

ELECTRICAL HAZARDS



- As the Smartank[™] system is powered by an electrical source, never use expose the equipment in the rain, snow or strong winds.
- Never use the filtration system to clean people and/or animals.
- · Before each use, undertake a visual check on all electrical cables for damage
- Never use the Smartank[™] system with a damaged cable.



MECHANICAL HAZARDS

• To avoid all mechanical hazards, ensure the Smartank[™] system is safely secured in position before filling the water tank.



PINCH RISK

• Keep hands and fingers clear of folding parts during operation to avoid injury.

Setting Up The Smartank™

Setting Up The Smartank™

Unpacking of the Smartank[™] system

Your Smartank[™] 2 system has been carefully manufactured, checked through QC and packaged as a kit.

5

If your Smartank[™] 2 is installed in a vehicle or trailer, please move to Storage of Smartank[™] 2 System. **(See Page 15)**

Packaging (bags, boxes, nails, tape etc.) should be kept out of reach of children as they may represent a potential hazard. Packaging can be recycled according to your local legislation.

Filling Time & Filtration Process

To operate the Smartank[™] 2 system, the operator needs to think of a suitable filling time before commencing on the cleaning task. Filling time takes approx. 2-4hrs (See Filling of Smartank[™])

The water enters the Smartank[™] 2 system through the water inlet connection, and then passes through the three prefilters (Sediment, Carbon, Carbon Block) removing the largest particles in the water before the water enters the membrane.

The reverse osmosis (RO) membrane filters remove up to 98% of the impurities in the water, before it reaches the de-ionising (DI) resin filter where the water is polished and reaches a 000ppm result.

Split Charge Relay

If the Smartank^m 2 is installed in your vehicle, then you most likely have a split charge relay system connecting your battery to your vehicle battery, and taking charge from the vehicle when on and in motion.

The split charge relay should already be installed in your vehicle system, however assistance is needed, please speak to the manufacturer or a Streamline™ fitting centre.



Flushing the system

Flushing Smartank[™] 2 system regularly is essential for maintaining the performance and extending the lifespan of your membranes. Over time, impurities can build up on the surface of the membrane, clogging its pores and reducing efficiency.

By flushing the system with clean water either for 20–30 minutes once a week or for 5–10 minutes before each use you create a ripple effect across the membrane surface. This motion helps dislodge and remove surface debris and contaminants, clearing the pores and restoring optimal flow and filtration.

Regular flushing ensures your membranes stay clean, effective, and last longer, ultimately protecting the quality of your water and your investment.

- Before first use activate the flush Solenoid button and leave to stand for 20-30 minutes.
- 2. We recommend flushing the system for 5-10 minutes before every use for optimal results.



Charging The Smartank™

If your Smartank[™] 2 is in a trailer system or on a skid mount plate, it is likely your Smartank[™] will need to be manually charged with a mains charger.

- Plug the Smartank[™] into an electrical wall socket.
- Insert the charger socket into the blue charging socket and switch on the charger.



Charging Time

The battery charging cycle is approx. 5hrs to full charge. The run time of the battery is approx. 10hrs continual usage.





12hr Continuous Run Time

Important

Only use the Streamline[™] charger supplied with your Smartank[™] 2 system. If misplaced, contact your dealer of manufacture immediately.

The charger will never over heat. This has a safety function to prevent the battery from over charging. You can operate the system and keep the battery on charge. Pay special attention to the mains electrical supply when operating with water.



Filling the Smartank[™] 2

1. Press the 🕑 button located on the left hand side of the front panel to switch the system on.

 Connect the **BLACK** hose to the mains water supply (do not turn the water supply on yet)

- Connect the other end of your **BLACK** hose to the **BLACK** water inlet on your bumper ports (do not turn water supply on yet)
- Connect the RED hose from the waste water outlet and direct to a drain or nearby soakaway
- 5. Activate both 'FILL SOLENOID' and 'BOOSTER PUMP' at the same time.

The controller will monitor the level switch in the water tank and fill the tank by energising the solenoid filling valve. When the water level rises and operates the level switch, the controller will de-energise the solenoid filling valve and stop the filling process automatically.



• 📰 😐 🚍 🖉 🔬 📖



Important

If your Smartank[™] 2 system has an optional extra booster pump, you can switch on to boost the fill pressure to reach 100psi / 6bar. This will reduce the filling time and have a longer life span on the membrane.

- 6. Switch on the mains water, and allow all air to pass through the filter system, once all the air has passed through water will begin to be filtered.
- Once the tank is full, the 'FILL SOLENOID' and 'BOOSTER PUMP' will automatically switch off, stop and shut the water off at the ports.

Once full turn off the mains tap then disconnect the hose couplings.



Getting ready to clean

 Connect your 'BLUE' link hose supplied to the pure water outlets marked 'Pure Water Out 1 / Pure Water Out 2' on the PURE water outlet to the hose reel or directly to water fed pole. If you have a static hose reel mounted in the vehicle, it will already be connected ready for use.



2. Press the 🕑 button located on the left hand side of the front panel to switch the system on.





 Switch on your desired pump controller, You can adjust the water flow rate by increasing/decreasing the flow rate number until a desired flow rate is achieved. The average flow rate is usually set between 40-50 on the Streamline[™] controller (approx.
 2.5lpm). The pump MUST run continuously. If the pump is running intermittently whilst water is flowing to the telescopic pole, decrease the speed on the flow controller by pressing the the water of the pump runs continuously.



4. Ensure the waterflow is clear from the Smartank[™] 2 system to the water fed pole. Any taps, univalves or hose stops must be open to allow a clear flow of water for the operator to clean.



Your Smartank[™] 2 Is Ready To Clean

You are now able to use your Smartank™ system. Please ensure you regularly check the water quality with the TDS meter provided.

Turning your Smartank[™] system OFF

- 1. Press and hold the 🕲 button on the Streamline™ flow controller, switching off the Shurflo™ pump
- 2. Disconnect any mains power supply before disconnecting the mains water supply
- 3. Remove all hoses and safely store in storage box

Pressure washing take off

Open the cabinet by releasing the four latches on either side of the front cover, use the key Supplied. Lower the bottom panel and raise the upper panel to gain access to the interior of your Smartank^M 2.

IMPORTANT: Do not release the pressure washing valve on your Smartank[™] 2 unless it is connected to a pressure washer. Doing so will cause the tank to drain.

 Connect your pressure washer to the Pressure washing take off pipe. Please ensure the connection is secure.



- 2. Once you are confident that your pressure washer is securely connected, open the blue valve to allow water to flow into the pressure washer.
- **3.** To disconnect your pressure washer firstly close the blue valve, then disconnect your pressure washer.





Tips When Cleaning



2

3

Δ

5

Different cleaning applications may require different water flow rates, i.e. large glass areas with lots of rinsing will need more water than a small window.

Water Interruption

The water supply can sometimes be interrupted for short lengths of time i.e. when the operator moves from window to window. However if the Smartank[™] system is interrupted for long periods of time, it is best to switch off the pump to save overheating and/or over pressurising, and potentially damaging the system.

x4 Jets Used On Brush

If the operator is using 4x jets with the waterfed brush, it is advised to turn up the speed of the controller, to give sufficient water flow for quality cleaning and rinsing.

Perfect Finish

The most important part of the cleaning process is to rinse the glass thoroughly, after the window has been cleaned. To do this, lift the brush away from the glass and move the head from side to side working from top to bottom motion, allowing the water remove all particles from the glass.

Spotting

If you are cleaning windows on a warm day, the rinsing procedure must be done meticulously, as warm, direct sunlight can cause spotting due to insufficient rinsing.

6

Storing The Smartank®

Storing The Smartank™

Short term storage: 2-4 weeks of no use

- 1. Flush the RO Membrane.
- 2. Remove the prefilter housing and pour out the excess water.
- 3. Remove the DI resin cartridge housing and pour out the excess water.
- 4. Remove the RO membrane caps for the excess water to drain from the membranes.
- 5. Ensure you reinstall the top caps on RO pressure vessels. Do not allow them to dry out.
- 6. Ensure you reinstall the prefilters and DI resin cartridge. Do not allow them to dry out.
- 7. Wipe surfaces down and ensure there is no surface water on the system.

Long term storage: 4 weeks plus of no use

- 1. Flush the RO Membrane.
- 2. Remove the prefilter housing and pour out the excess water.
- 3. Remove the DI resin cartridge housing and pour out the excess water.
- 4. Remove the RO membrane caps for the excess water to drain from the membranes.
- 5. Remove all filters from the Smartank[™] system, wrap in individual plastic bags and seal.
- 6. Replace all filter housings and membrane caps without any filters inside.
- 7. It is important to store the Smartank system where it cannot freeze.
- 8. It is important for all filters to not be allowed to dry out when not in use.
- 9. Wipe surfaces down and ensure there is no surface water on the system.

Important

The unit must be protected from freezing.



Malfunctions & Troubleshooting

Controller Troubleshooting

Controller Messages



dE – Dead end has been detected. The pump has been turned off automatically by the controller, as there is a water stop somewhere in the system.

\bigcap		D
-	╴┝┛┕╸	
L		J

PS – The pressure switch has been activated. This means the pressure has exceeded the pressure switch rating. Check if here is no water blockage or reduce the pump speed to lower the resistance.



BAT - Battery voltage has dropped below 11.5V. Re-charge your battery as soon as possible, before your pump finally stops.



(Flashing & Pump Has Stopped) **BAT - (Pump still working) - Battery voltage has dropped below 11.0V.** The pump has been stopped by the controller to prevent possible damage to the battery. Re-charge your battery as soon as possible. If you have a split charge relay fitted to your Smartank[™] system, start your vehicle engine which will then start the charging process.



FLO - The controller is set to a filling mode.

The controller will monitor the level switch in the water tank and fill the tank by energising the solenoid filling valve. When the water level rises and operates the level switch, the controller will de-energise the solenoid filling valve and stop the filling process automatically.

Troubleshooting

	Controller stating (DE or PS) Constantly					
1	a.	Check for any blockages in hose or telescopic pole tubing				
	b. c.	Check for any blockages in membrane Raise the calibration on the controller				
	d.	Contact service centre				
	Controller Flashing (BAT) Constantly					
2	a.	Plug in battery charger immediately before the battery is flat	BB E			
	b.	Contact service centre				
3	Low water pressure or water supply at water fed brush?					
	a. b.	Check for any blockages or kinks in hose Disconnect all extension hose/hose reels and connect the Smart	ank™			
	5.	filtration system directly to the telescopic pole	diik			
	c. d.	Clean or replace the sediment filter Contact service centre				
	u.	Contact service centre				
	High waste water flow and low pure water flow?					
4	a.	Check if membrane has the plug installed – if so, replace membrane				
	b.	Contact service centre				
	High P	ure Water TDS?				
5	a.	Check membrane quality – replace membrane				
	b.	Check DI filter – replace resin beads in DI cartridge				
	c.	Contact service centre				
	Booste	er Pump Failing To Start?				
	a.	Check battery charge – see '12.1 How to charge your battery'				
6	b. c.	Check fuse on battery charger Check fuse on mains power				




Adjusting the calibration on the controller

The Streamline[™] controller can automatically shut down the pump automatically

This is known as 'dead-end' and labelled 'dE' on the controller.

The sensitivity can be adjusted and set by the operator, if the controller is turning off too early or too late.

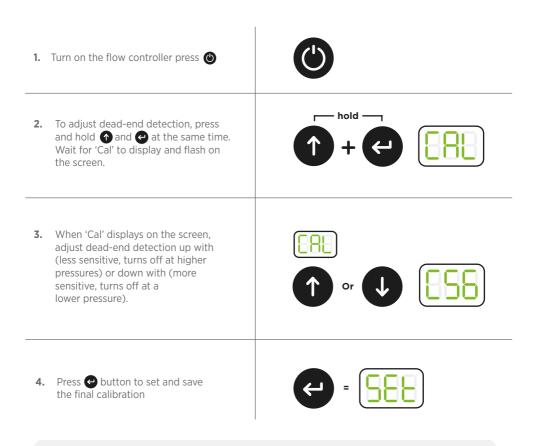

Warning: Do not set the calibration too high.

Setting calibration higher than necessary places extra strain on both the pump and the controller in a dead-end situation. This can result in damage to both the pump and your controller.

Maintenance & Replacing Filters

8

Maintenance & Replacing Filters

It is recommended to run a weekly, monthly and quarterly examination on the Smartank[™] 2 system to ensure all filters are adequate and effective for producing pure 000ppm water quality.



Weekly inspection

- Keep a check on the pure water TDS by using the handheld TDS meter. This measures in parts per million (ppm). If the output reads higher than 3ppm, it is recommended to change the de-ionising (DI) filter, and make a note in the back of the booklet
- Keep a check on the battery voltage by running through the controller function until you
 reach 'BAT'. A good healthy battery will read between 11V and 12.4V.



Monthly inspection

 Each month it is recommended to flush through the reverse osmosis (RO) membranes and reset the ratio between pure water output and waste water output.



Quarterly inspections

- Depending on the usage, however, it is advised to change the prefilters at least once a quarter.
- Complete a check on all membranes to ensure performance is still acceptable

Warning:

Ensure the Smartank[™] 2 system is not operating or under pressure when maintenance or filter replacements are being undertaken.



Pump

The pump fitted to the Smartank^m 2 systems are protected by an in-line strainer filter, with a clear top allowing for visual inspection.

The pump has a built in pressure switch. When switched on it will pump until it has reached the maximum pressure setting before cutting out. This is a safety feature. However, the pressure switch may burn out if the pump is allowed to run intermittently.

To avoid this happening, make sure that the pump speed is correctly set on the flow

controller. The pump must not be stored under pressure as this will invalidate the warranty.

If any debris accumulate in the strainers, unscrew the top and flush out with clean water.



Product Codes: SF-DP30-014-150 or SF-DP30-014-100



TDS meters

This system relies on a series of filters to produce pure 000ppm water. To ensure that your Smartank™ 2 filters operate efficiently, the filters will need to be changed in accord with your water hardness.

Open the cabinet by turning the two latches on either side of the front cover, using the key supplied. Lower the front cover carefully ensuring that the external controls are not damaged.

The Smartank[™] is fitted with two inline TDS meters.

 The first TDS meter is located inside the Smartank[™] 2 cabinet, which measures the in coming mains water (line one) along with the Reverse Osmosis filtered water (line two).

If the Reverse Osmosis (out) reading is above 40ppm, a replacement RO membrane is needed.



(233) = (238)

(-) =

2) The second TDS meter is mounted on the front of the Smartank™ cabinet, which monitors the water purity of both DI filters (Pump 1/Pump 2). If the final water reading is above 5ppm, a replacement DI filter is needed.



Flow-meter settings

- i) The flow rate in litres per minute can be displayed by pressing enter, rtE is displayed followed by the value.
- ii) Press enter again to display the water made (since purchase or last reset), Ltr is displayed followed by the value. This can be reset by pressing and holding the down button.
- **iii)** Press enter again to display the total water made in the controllers life, tOt is displayed followed by the value.

Prefilters - Usage & Replacing

Please ensure your Smartank $^{\rm TM}$ 2 is switched off before changing filters.

The prefilter Set are the first initial filters that the water will pass through.

How To Change Your Pre filters

Use the spanner to unscrew the filter housing and proceed to unscrew the filter by hand. Be cautious of spillage.

It is important to keep the prefilters in the correct order for quality filtration.

- 1. 10" Sediment prefilter
- 2. 10" Carbon prefilter

Ensure you safely and securing tighten up the housing to ensure the system is safe under operating pressure.



Product Code:

KIT02210-001





Reverse Osmosis (RO) Membrane Filters – Usage and replacing

The RO membranes are the core part of the water filtration - produce up to 98% of water filtration.

Usage

Either yearly replacement or approx. 250,000ltrs of pure water running through, whichever comes first, your flow meter will track how much water you have used.

How do I change the RO membranes?

The RO membrane filter is hidden below the centre cover in the water tank..

Please pay special attention to the flow direction on the membrane housings and on the membranes themselves.

- 1) Ensure the Smartank[™] is switched off and no water filling into the tank.
- 2) Remove the inlet, outlet and waste water hose connections from the stainless steel membrane housing.
- 3) Release the stainless steel membrane housing from the clamps and remove the used RO membrane filter into general waste.
- 4) Reinsert the new RO membrane filter in the housing, ensuring the membrane seal is located on the inlet of the stainless steel membrane housing.
- 5) Reassemble the stainless steel membrane housing, and clamp back into position before attaching the inlet, outlet and waste water hose connections.



After you have replaced a new RO membrane filter, ensure you complete a flush before the membrane is put under pressure.



Replacement

250.000ltrs Mains Water

Or

Warning:

Don't lose the RO membrane plugs! Carefully insert in the water inlet side. If in doubt speak to your Streamline[™] technician.

De-ionising (DI) Resin Beads - usage and replacing

The DI filter is a vessel containing DI resin beads. The DI resin cannot be regenerated and needs replacing should the 'out' TDS reading rise above 006ppm.

To replace the DI resin filter:

- Ensure the Smartank[™] is switched off and no water filling into the tank.
- 2) Remove the inlet and outlet hose from the filter.
- 3) Unkhook the DI vessel from the connecting bracket.
- 4) Unscrew the DI filter head and remove both the head and riser carefully
- Release the DI filter from the clamp and empty of the used resin beads into general waste.
- Refill the DI filter with new resin beads, ensuring that the filter is filled no more than three quarters.
- Reassemble the head and riser, and clamp the filter back into position before attaching the inlet and outlet hose connections.

Ensure you safely and securing tighten up the housing to ensure the system is safe under operating pressure.



Product Code:

MB115

Warning:

Disposing of resin beads can create a slippery surface. Care needed to dispose of resin beads effectively. Remove all over spill immediately.

Disposing Of Filters & Machine

The Smartank[™] 2 system is classified as special waste. It must be taken apart and divided into uniform sections which should be disposed of according to current legislation.

9

Do not use the components removed as spare parts.

All filters are disposable as unharmful general waste.



Why Streamline[™]?

Flexibility

- Streamline™ systems can be built according to customers' exact requirements
- For non-standard systems, the user's needs or specifications are listened to and turned into reality.

Quality

- Whilst price is important, quality is remembered long after price is forgotten
- We insist on sourcing brand name products from around the world, only of a reputable quality, and bring them together under the Streamline™ name
- All Streamline[™] products carry a full one year's warranty, according to the manufacturers' standard terms and conditions of sale.

Service

- We have an in-house technical helpline able to answer most of your questions relating to the capabilities and functionalities of all Streamline™ products
- If we get it wrong, we will put it right. If you are sent a wrong item, we will immediately attend to sending you the correct item and arrange a collection of the wrong item without any quibbles
- Streamline[™] is backed by a comprehensive range with massive stocks providing you with a 'one stop shop' for all your requirements.



Manufactured In The United Kingdom



Checked & Tested By Quality Control

Warranty Information

Warranty Information

Streamline[™] Warranty

The warranty on all Machines and Equipment is for 1 year (12-months) from RECORDED DATE OF PURCHASE.

THIS WARRANTY EXCLUDES NORMAL MAINTENANCE ITEMS, including but not limited to HOSES, FILTERS, O-RINGS, DIAPHRAGMS, VALVES, GASKETS, CARBON BRUSHES and damage to motors and other components as a result of failure to replace normal maintenance items. THIS LIST IS NOT EXHAUSTIVE.

If Streamline[™] receives notice of such defects during the warranty period, Streamline[™] will either, at its opinion, repair or replace components which prove to be defective.

Replacement parts will only be supplied under warranty, upon the inspection and approval of the defective parts by Streamline™.

Should it be necessary to supply replacement parts before the opportunity to inspect, these will be charged at current prices and credit will only be issued upon subsequent inspection and warranty approval by Streamline[™].

The customer is responsible for the cost of return of the defective part. If warranty is approved, Streamline[™] will pay for the cost of the repaired or replacement part.

This warranty excludes the following conditions and circumstances which are at the discretion of Streamline™: Wear and tear, misuse, abuse improper maintenance, frost damage, the use of chemicals other than those supplied or approved by Streamline™, improper installation or repair, unauthorised modification, incidental or consequential costs, loss or damage, service, labour or third party charges, the cost of returning defective parts to Streamline™.

11

This warranty constitutes the exclusive remedy of any purchaser of a Streamline[™] unit and is in lieu of all other warranties, express or implied, including without limitation any implied warranty of merchantability or fitness for use, to the fullest extent permitted by law. In no event shall any implied warranty of merchantability or fitness for use exceed the term of the applicable warranty stated above and Streamline[™] shall have no other obligation or liability.

To maintain the validity of your warranty, only use Streamline[™] manufactured filters with your Smartank[™] 2 system. The use of non Streamline[™] Filters may result in damage and will void your warranty.

Important

Unfortunately these rights cannot be transferred to a third party.



INSTR-SMT2